



Service Information

If any of the below work items were performed, the window regulator motor must be reset.

- Removal and installation of the Window Regulator
- Removal and installation of the Motor from the Window Regulator
- Operating the Window Regulator outside of the vehicle
- Removal and installation of the Window Glass

To reset the motor, refer to the **Service Procedure** below.

SERVICE PROCEDURE

1. Remove door panel.
 - Refer to the applicable Service Manual for Door Panel removal instructions.
2. Get inside the vehicle and close the door.
3. With the door closed, lift **UP** and **HOLD** the window switch until the window is fully closed.
 - **Do not** use the Window auto-closing function.
 - **Do not** release the Switch before the Window is fully closed.
4. Press and hold the window regulator motor reset switch. While holding the Reset Switch: Press **DOWN** and **HOLD** the window switch until the window is fully open.
 - **Do not** use the window auto-opening function.
 - **Do not** release the switch before the window is fully open.
5. Release the Reset Switch. Then lift **UP** and **HOLD** the window switch until the window is fully closed.
 - **Do not** use the window auto closing function.
 - **Do not** release the switch before the window is fully closed.
6. Open the door to release to door switch. The window glass should partially move down.
7. Re-install door panel.

07 3267 8998

www.powerwin.com.au